 
 
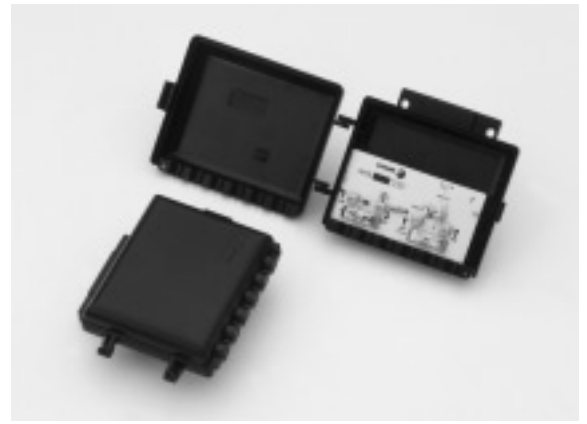 


- E** MEZCLADOR DE MÁSTIL
- D** ANTENNEN - WEICHE
- F** COPLEURS DE MÂT
- GB** MAST COMBINER
- I** MISCELATORE DA PALO
- P** MISTURADORES DE MASTRO

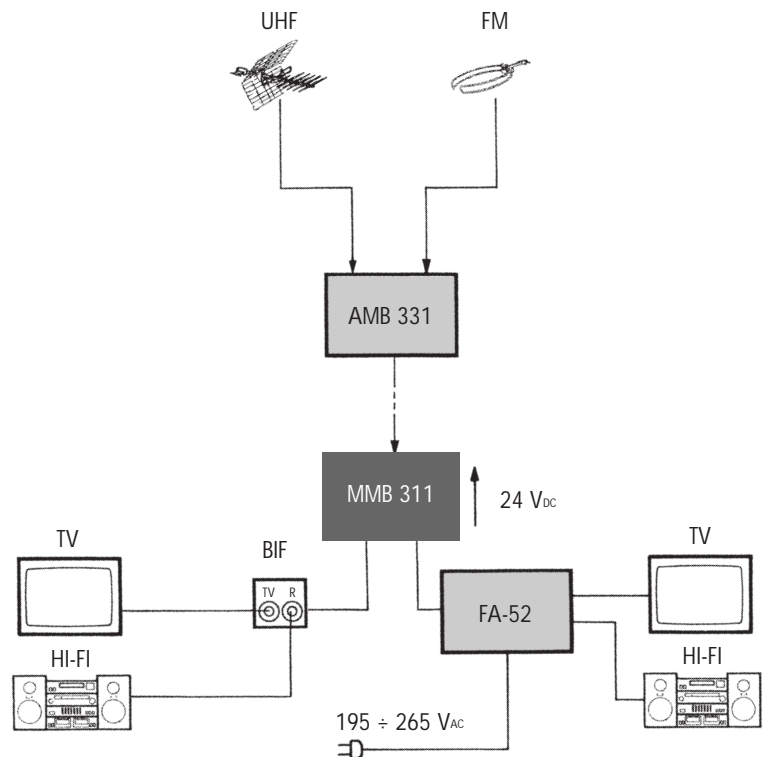

MMB

E	D	F	GB	I	P		MMB 311		MMB 320		MMB 330		
Nº de entradas	Anzahl Eingänge	Nbre. d'entrées	No. of inputs	Nº entrate	Nº de entradas		2		2		3		
Bandas cubiertas	Bandbereich	Bande couverte	Band coverage	Bande d'ingresso	Banda coberta		VHF-UHF	VHF-UHF	VHF	UHF	VHF	UHF	UHF
Impedancia de entrada y salida	Eingangs-Ausgangs Impedanz	Impédance d'entrée et sorties	Input and output impedance	Impedenza d'ingresso-uscita	Impedancia de entradas-saída	Ω	75						
Pérdidas de inserción (Typ.)	Durchgangsdämpfung	Perte d'insertion (Typ.)	Insertion loss (Typ.)	Perdita di inserimento	Perdas de inserção	dB	4,5	4,5	0,5	1,5	0,5	4,5	4,5
Desacoplo entre entradas	Entkopplung zwischen Eingängen	Séparation entre entrées	Isolation between inputs	Disaccoppiamento fra entrate	Isolamento entre entradas	dB	>26						
Paso de corriente	DC Durchspeisung	Passage de courant	DC pass	Passaggio della corrente	Passagen de corrente		SI	SI	-	SI	-	-	SI
Temperatura de funcionamiento	Temperaturbereich	Température de fonctionnement	Operating temperature range	Intervalo temperatura di lavoro	Temperatura de funcionamento	$^{\circ}\text{C}$	- 20...60						

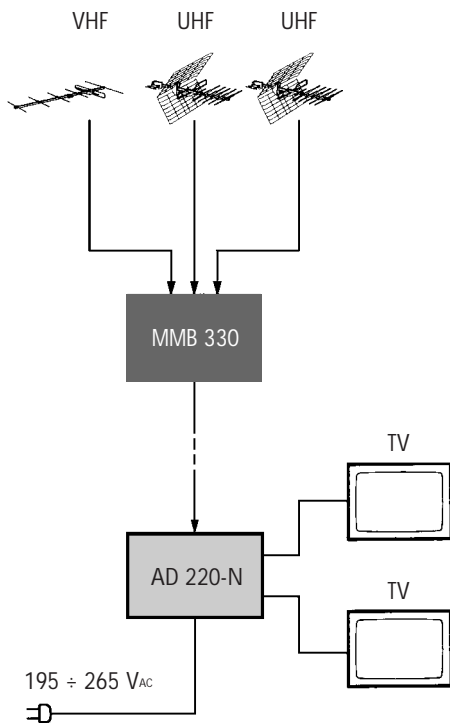

Fagor Electrónica, S.Coop.

San Andrés, s/n.
 E-20500 Mondragón (Spain)
 Tel. +34 43 712526
 Fax +34 43 712893
 E-mail: rf.sales@fagorelectronica.es
 www.fagorelectronica.com

